



CONNECTION OF LIGHT CURTAIN MODEL 183D-24-2590 TO FMK AC, FC AND UNIVERSAL DRIVE CONTROL UNITS

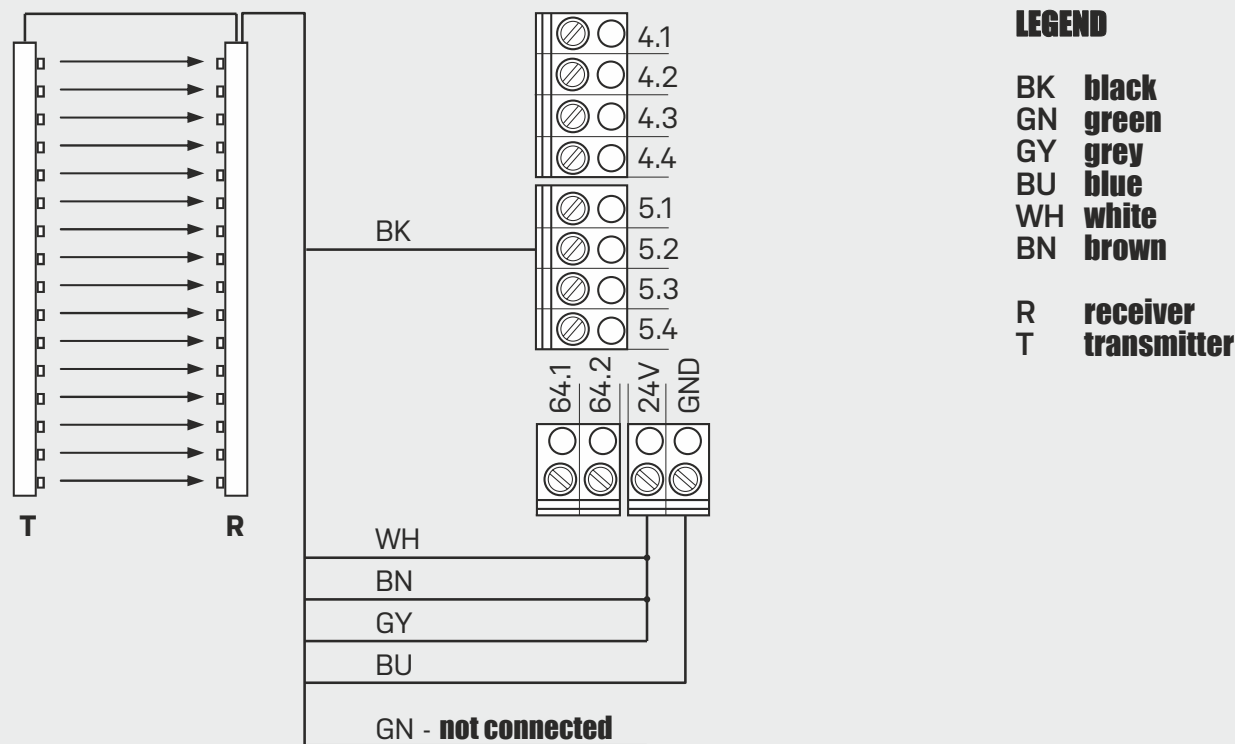


Activate the light curtain function in menu 5.1 by setting the value to 1

CONNECTION OF LIGHT CURTAIN MODEL 183D-24-2590 TO FMK MULTI-DRIVE CONTROL UNIT

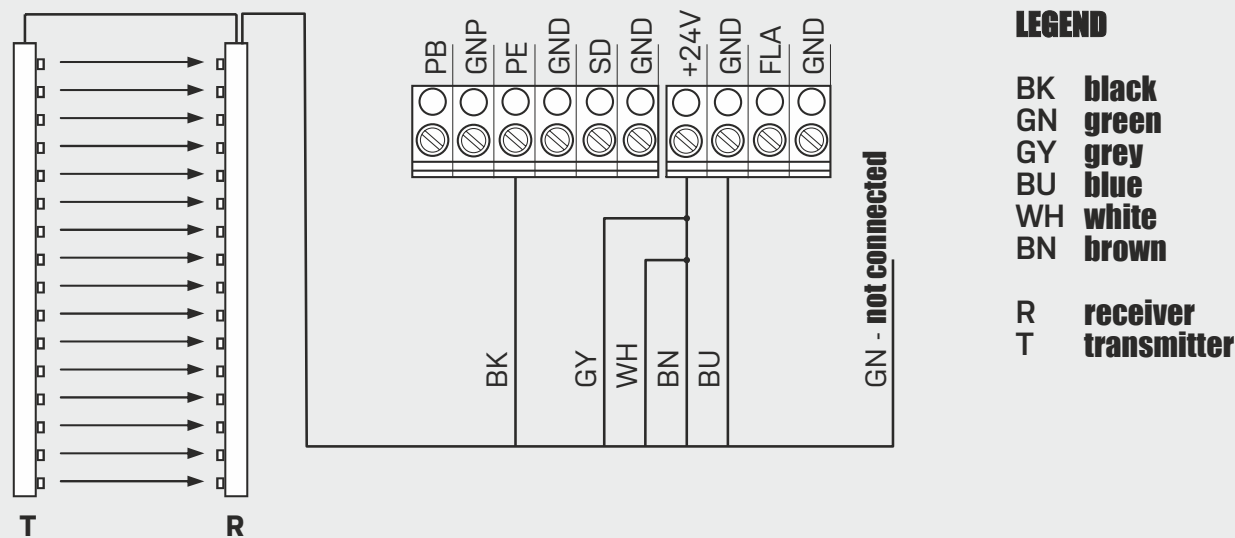


Activate the light curtain function in menu 5.0 by setting the value to 2

CONNECTION OF LIGHT CURTAIN MODEL 183D-24-2590 TO FMK BASE 50 AND BASE 70 CONTROL UNIT

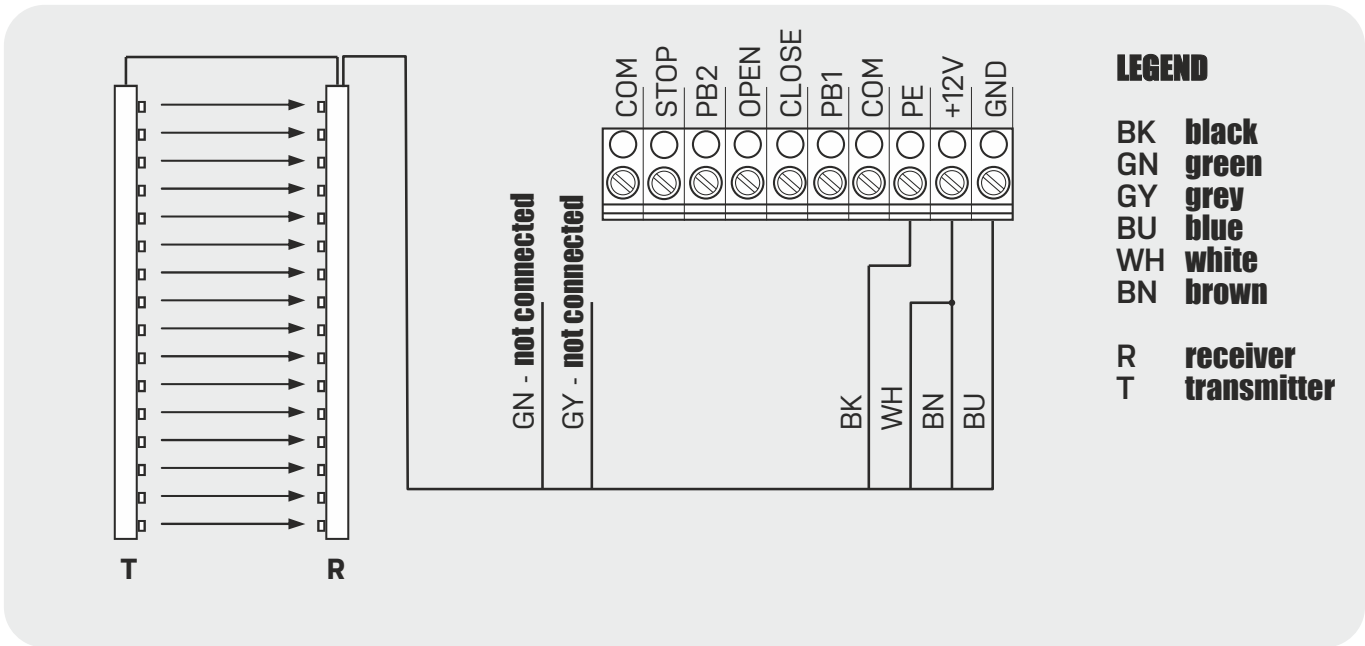


Activate the light curtain function in menu 5.0 by setting the value to 1

CONNECTION OF LIGHT CURTAIN MODEL 183D-24-2590 TO FMK BASE 35 CONTROL UNIT

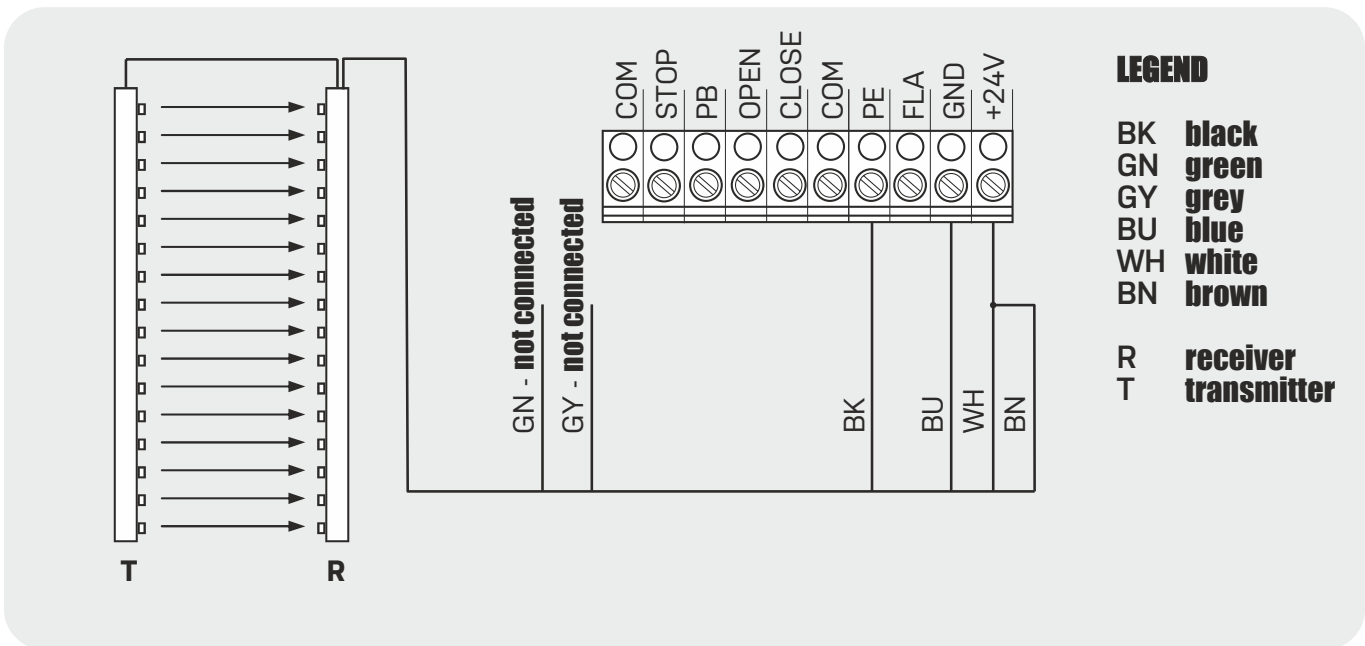


Activate the light curtain function in menu 5.0 by setting the value to 1

CONNECTION OF LIGHT CURTAIN MODEL 183D-24-2590 TO GFA TS970, TS971 CONTROL UNIT

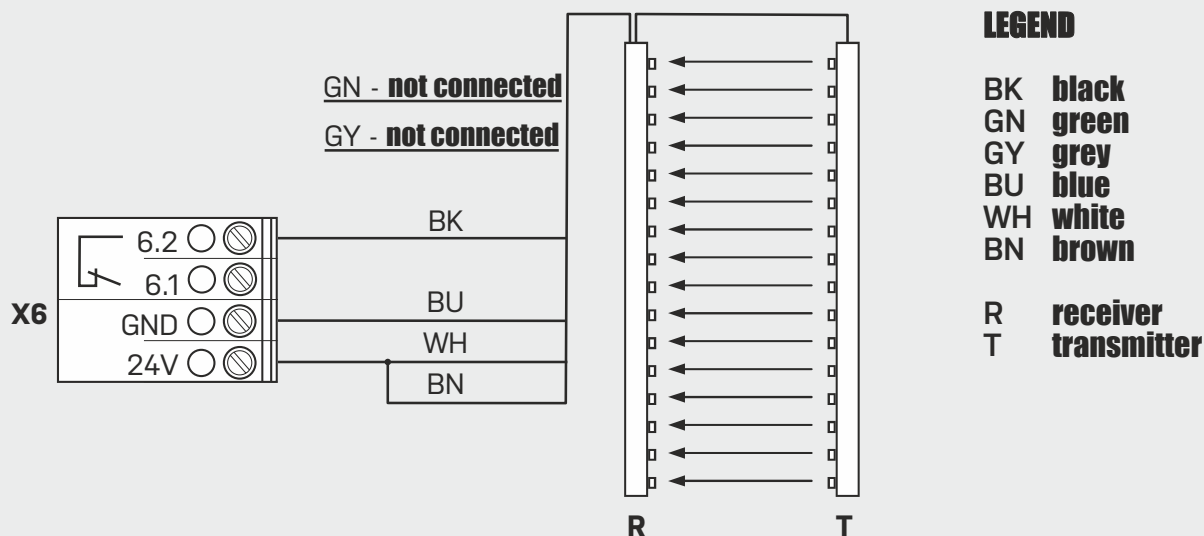

Before connecting the black wire, remove the jumper from terminals 6.1 and 6.2

CONNECTION OF LIGHT CURTAIN MODEL 183D-24-2590 TO MFZ CS 320, CS 320 LITE CONTROL UNIT

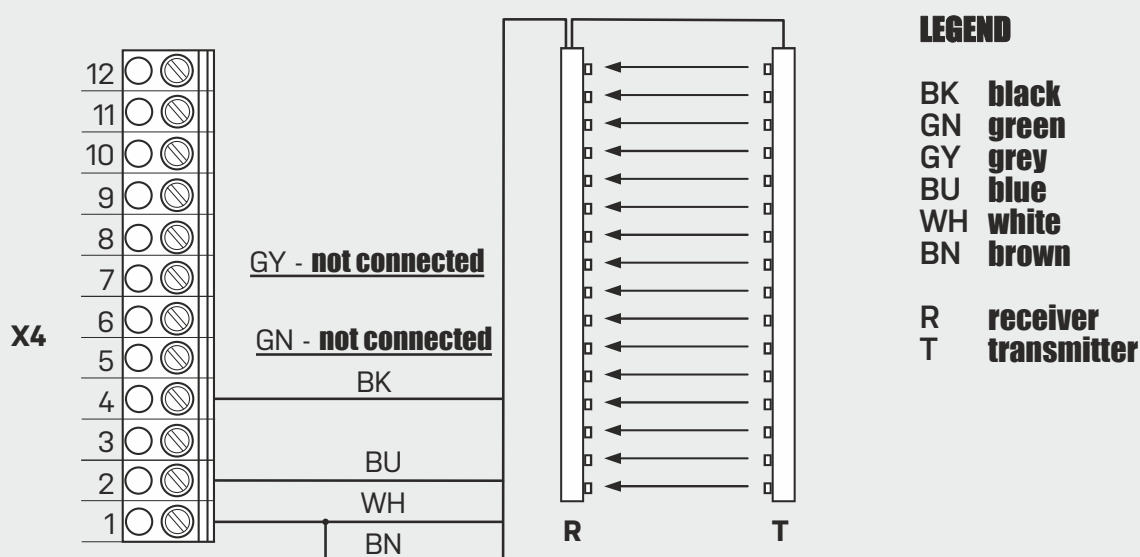

Before connecting the black wire, remove the jumper from terminals 3 and 4